


Instructions: Wall Mounts



Elegantly mount your glass panels without the need to drill holes in your glass.

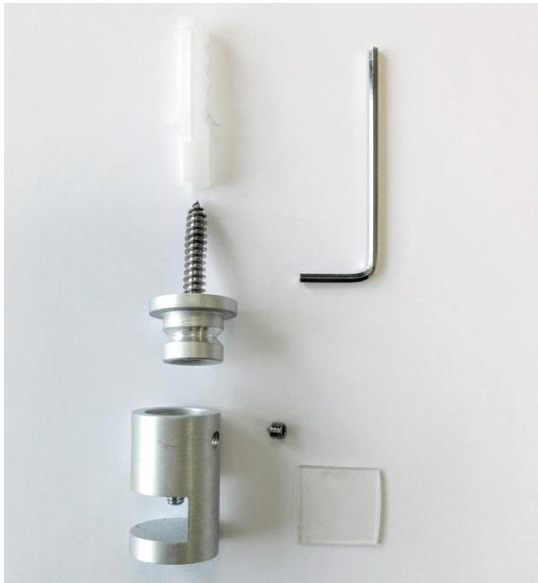

Step 1

Measure and mark on the wall and glass where you want the mounts to be placed. Use a spirit level to ensure the final mounted piece will be level.

Step 2

Drill Holes in the wall to accommodate the screws. Use the wall plug if not drilling into wood.

Step 3

Using the allen key provided, undo the small side screw in the wall mount and remove the inner cap of the mount.

Step 4

Insert the wall screw through the hole in the cap and screw into the wall with a cross head screwdriver so the cap is flush with the wall.

Step 5

Attach the main part of the mount to the glass: The glass will rest on the bottom part of the mount to help support it (see image right). Adjust the screw inside the mount using the allen key so it grips the glass. Use the small plastic squares to protect the glass from the metal. You can cut this to shape if desired.

Step 6

Repeat for the other 3 mounts. Make sure they are spaced correctly so they will line up with the caps on the wall.

Step 7

Slot the front of the mounts onto the caps attached to the wall. Use the allen key to tighten up the small side screws to keep the mounts in place.



Looking for tips and advice? Visit the Knowledge Base on our website for a wealth of information.

www.warm-glass.co.uk